



1,000km 600miles

1,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect drive belts (Diesel engine models) See NOTE (1)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Inspect torque of manifolds & exhaust tube nuts	✓	✓
	Inspect idling speed (Except YD & ZD engines)	✓	✓
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
CHASSIS AND BODY MAINTENANCE			
4WD MODEL AND COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





5,000km

3,000miles / 3months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-8 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





10,000km

6,000miles / 6months

6Months

10,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 5,000km/6months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 5,000km/6months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page  M-9





10,000km

6,000miles / 6months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-10 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





15,000km

9,000miles / 9months

9Months

15,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.



20,000km

12,000miles / 12months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Diesel engine models) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Replace engine oil at 10,000km/12months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Replace engine oil filter at 10,000km/12months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓

M-12 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72

20,000km 12,000miles / 12months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Inspect free-running hub grease	✓	J
	Inspect limited-slip differential (LSD) oil (For level & leaks)	✓	
	Replace limited-slip differential (LSD) oil		C,H
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks) See NOTE (5)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Replace brake fluid		F
	Replace air conditioner filter (ventilation air filter)	✓	A
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓

M-14 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



12Months

20,000km

		Normal	Severe
4WD MODEL AND COMMERCIAL VEHICLE	Inspect all mode 4WD transfer fluid & differential oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





25,000km

15,000miles / 15months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-16 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





30,000km

18,000miles / 18months

18Months

30,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 15,000km/18months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 15,000km/18months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page  M-17





30,000km

18,000miles / 18months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------

M-18 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





35,000km

21,000miles / 21 months

21Months

35,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.



40,000km

24,000miles / 24months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts	See NOTE (1)	✓
	Check and correct the engine coolant mixture ratio	See NOTE (6)	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Except diesel engines & 350Z models)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 20,000km/24months (For VQ turbocharged engine)	See NOTE (2)	✓
	Replace engine oil filter at 20,000km/24months (For VQ turbocharged engine)	See NOTE (2)	✓
	Inspect positive crankcase ventilation (PCV) system (VQ engine models)	✓	✓
	Replace PCV filter	✓	A
	Replace spark plugs(Conventional type only)	✓	✓

M-20 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



24Months

40,000km

		Normal	Severe
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Replace fuel filter	✓	A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Replace fuel filters	See NOTE (7)	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Replace spark plugs (Conventional type with catalyst)	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary. Continue Next Page M-21





40,000km

24,000miles / 24months

CHASSIS AND BODY MAINTENANCE			
	Normal	Severe	
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) oil	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Inspect Automatic Speed Control Device(ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (if necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect free-running hub grease	✓	J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Replace air conditioner filter (ventilation air filter)	✓	A
	Replace automatic transmission fluid		C,H

M-22 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



24Months

40,000km

		Normal	Severe
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	
	Replace differential oil (including viscous type LSD)		C,H
4WD MODEL AND COMMERCIAL VEHICLE	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓
	Lubricate axle joint in knuckle flange (For Y61 models)	✓	✓
	Replace transfer & differential oil	✓	✓
	Inspect all mode 4WD transfer fluid & differential oil (Except LSD) (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J
	Inspect front wheel bearing grease (4x2 models)	✓	✓
	Inspect steering damper (Commercial vehicles)	✓	✓

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





45,000km

27,000miles / 27months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-24 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





50,000km

30,000miles / 30months

30Months

50,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 25,000km/30months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 25,000km/30months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page  M-25





50,000km

30,000miles / 30months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-26 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





55,000km

33,000miles / 33months

33Months

55,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	Mileage	Dealer Name	Service Advisor
------	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





60,000km

36,000miles / 36months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Diesel engine models) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Replace engine oil at 30,000km/36months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Replace engine oil filter at 30,000km/36months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓

M-28 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72

60,000km

36,000miles / 36months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Inspect free-running hub grease	✓	J
	Inspect limited-slip differential (LSD) oil (For level & leaks)	✓	
	Replace limited-slip differential (LSD) oil		C,H
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Replace Hyper-CVT fluid at 60,000km See NOTE (5)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Replace brake fluid		F
	Replace air conditioner filter (ventilation air filter)	✓	A
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓

M-30 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



36Months

60,000km

		Normal	Severe
4WD MODEL AND COMMERCIAL VEHICLE	Inspect all mode 4WD transfer fluid & differential oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





65,000km

39,000miles / 39months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-32 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





70,000km

42,000miles / 42months

42Months

70,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 35,000km/42months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 35,000km/42months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page  M-33





70,000km

42,000miles / 42months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-34 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





75,000km

45,000miles / 45months

45Months

75,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.



80,000km

48,000miles / 48months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts See NOTE (1)	✓	✓
	Replace engine coolant (Use Nissan Genuine Engine Coolant or equivalent in its quality) See NOTE (6)	✓	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Except diesel engines & 350Z models)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 40,000km/48months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Replace engine oil filter at 40,000km/48months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Inspect positive crankcase ventilation (PCV) system (VQ engine models)	✓	✓
	Replace PCV filter	✓	A
	Replace spark plugs (Conventional type only)	✓	✓

M-36 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



48Months

80,000km

		Normal	Severe
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Replace fuel filter	✓	A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Replace fuel filters	See NOTE (7)	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Replace spark plugs (Conventional type with catalyst)	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page M-37

80,000km

48,000miles / 48months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) oil	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect free-running hub grease	✓	J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Replace air conditioner filter (ventilation air filter)	✓	A
	Replace automatic transmission fluid		C,H

M-38 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



48Months

80,000km

		Normal	Severe
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	
	Replace differential oil (including viscous type LSD)		C,H
4WD MODEL AND COMMERCIAL VEHICLE	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓
	Lubricate axle joint in knuckle flange (For Y61 models)	✓	✓
	Replace transfer & differential oil	✓	✓
	Replace all mode 4WD transfer fluid & differential oil (Except LSD)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J
	Inspect front wheel bearing grease (4x2 models)	✓	✓
	Inspect steering damper (Commercial vehicles)	✓	✓

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------





85,000km

51,000miles / 51 months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-40 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





90,000km

54,000miles / 54months

54Months

90,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 45,000km/54months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 45,000km/54months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page M-41





90,000km

54,000miles / 54months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-42 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





95,000km

57,000miles / 57months

57Months

95,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





100,000km

60,000miles / 60months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Diesel engine models) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Replace timing belt at 100,000Km	✓	✓
	Replace engine oil at 50,000km/60months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Replace engine oil filter at 50,000km/60months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace spark plugs at 100,000Km (Platinum-tipped type)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Replace timing belt for camshaft & injection pump at 100,000Km	✓	✓
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓

M-44 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



60Months

100,000km

		Normal	Severe
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Inspect drive belts (Taxi use)	✓	✓
	Replace timing belt at 100,000Km	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently)	✓	✓
	Replace spark plugs at 100,000Km (Iridium-tipped type or Platinum-tipped type)	✓	✓
	Adjust ignition timing	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓
	Replace catalyst at 100,000Km (Taxi use)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary. Continue Next Page M-45



100,000km 60,000miles / 60months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Inspect free-running hub grease	✓	J
	Inspect limited-slip differential (LSD) oil (For level & leaks)	✓	
	Replace limited-slip differential (LSD) oil		C,H
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks) See NOTE (5)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Replace brake fluid		F
	Replace air conditioner filter (ventilation air filter)	✓	A
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓

M-46 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





60Months

100,000km

		Normal	Severe
4WD MODEL AND COMMERCIAL VEHICLE	Inspect all mode 4WD transfer fluid & differential oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓
	Replace manual transmission oil at 100,000km (Commercial vehicles)	✓	✓

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------





105,000km

63,000miles / 63months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-48 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





110,000km

66,000miles / 66months

66Months

110,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 55,000km/66months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 55,000km/66months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page  M-49





110,000km

66,000miles / 66months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------

M-50 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





115,000km

69,000miles / 69months

69Months

115,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





1 20,000km

72,000miles / 72months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts See NOTE (1)	✓	✓
	Replace engine coolant (Use Nissan Genuine Engine Coolant or equivalent in its quality) See NOTE (6)	✓	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Except diesel engines & 350Z models)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 60,000km/72months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Replace engine oil filter at 60,000km/72months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Inspect positive crankcase ventilation (PCV) system (VQ engine models)	✓	✓
	Replace PCV filter	✓	A
	Replace spark plugs (Conventional type only)	✓	✓

M-52 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





72Months

120,000km

		Normal	Severe
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Replace fuel filter	✓	A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Replace fuel filters See NOTE (7)	✓	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Replace spark plugs (Conventional type with catalyst)	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page M-53



1 20,000km

72,000miles / 72months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Replace Hyper-CVT fluid at 120,000km See NOTE (5)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) oil	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Replace air conditioner filter (ventilation air filter)	✓	A
	Replace automatic transmission fluid		C,H

M-54 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





72Months

120,000km

		Normal	Severe
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	
	Replace differential oil (including viscous type LSD)		C,H
4WD MODEL AND COMMERCIAL VEHICLE	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓
	Lubricate axle joint in knuckle flange (For Y61 models)	✓	✓
	Inspect free-running hub grease	✓	J
	Replace transfer & differential oil	✓	✓
	Inspect all mode 4WD transfer fluid & differential oil (Except LSD) (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J
	Inspect front wheel bearing grease (4x2 models)	✓	✓
	Inspect steering damper (Commercial vehicles)	✓	✓

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





125,000km

75,000miles / 75months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-56 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





130,000km

78,000miles / 78months

78Months

130,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 65,000km/78months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 65,000km/78months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page  M-57





130,000km

78,000miles / 78months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-58 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





135,000km

81,000miles / 81 months

81Months

135,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)		A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





140,000km

84,000miles / 84months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Diesel engine models) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Replace engine oil at 70,000km/84months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Replace engine oil filter at 70,000km/84months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓

M-60 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



140,000km

84,000miles / 84months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Inspect free-running hub grease	✓	J
	Inspect limited-slip differential (LSD) oil (For level & leaks)	✓	
	Replace limited-slip differential (LSD) oil		C,H
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks) See NOTE (5)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Replace brake fluid		F
	Replace air conditioner filter (ventilation air filter)	✓	A
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓

M-62 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





84Months

140,000km

		Normal	Severe
4WD MODEL AND COMMERCIAL VEHICLE	Inspect all mode 4WD transfer fluid & differential oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





145,000km

87,000miles / 87months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

M-64 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





150,000km

90,000miles / 90months

90Months

150,000km

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engines)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace engine oil at 75,000km/90months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
	Replace engine oil filter at 75,000km/90months (For VQ turbocharged engine) See NOTE (2)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Except for 2WD D22 models with YD engine)	✓	A,B,C,D
	Replace engine oil (For 2WD D22 models with YD engine)		A,B,C,D
	Replace engine oil (For 4WD D22 models with YD & ZD engines)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD engine) See NOTE (3)		A,B,C,D
	Inspect engine oil level (For D22 models with YD & ZD engines)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page  M-65





150,000km

90,000miles / 90months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)		G
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Inspect transfer & differential oil (For level & leaks)	✓	✓
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealer Name	Service Advisor
----------	---------	-------------	-----------------

M-66 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





155,000km

93,000miles / 93months

93Months

155,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61 & D22 models with ZD engine and 4WD D22 models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD engine)		A,B,C,D
	Inspect engine oil level (For Y61 models with ZD engine and D22 models with YD & ZD engines)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
4WD MODEL & COMMERCIAL VEHICLE	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





160,000km

96,000miles / 96months

ENGINE MAINTENANCE		Normal	Severe
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts See NOTE (1)	✓	✓
	Replace engine coolant (Use Nissan Genuine Engine Coolant or equivalent in its quality) See NOTE (6)	✓	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Except diesel engines & 350Z models)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 80,000km/96months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Replace engine oil filter at 80,000km/96months (For VQ turbocharged engine) See NOTE (2)	✓	A,B,C,D
	Inspect positive crankcase ventilation (PCV) system (VQ engine models)	✓	✓
	Replace PCV filter	✓	A
	Replace spark plugs (Conventional type only)	✓	✓

M-68 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72





96Months

160,000km

		Normal	Severe
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engines)	✓	✓
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Replace fuel filter	✓	A,E
	Inspect idling speed (Except YD & ZD engines)	✓	✓
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Replace fuel filters	See NOTE (7)	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Replace spark plugs (Conventional type with catalyst)	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page M-69



160,000km

96,000miles / 96months

CHASSIS AND BODY MAINTENANCE		Normal	Severe
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) oil	✓	C,H
	Inspect steering gear & linkage, axle & suspension parts, propeller shaft & front drive shaft	✓	G,H
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect free-running hub grease	✓	J
	Lubricate locks, hinges & hood latch (& sliding door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Replace air conditioner filter (ventilation air filter)	✓	A
	Replace automatic transmission fluid		C,H

M-70 Inspect: Inspect and correct, or replace as necessary.

NOTE and Severe driving conditions: See page M-72



96Months

160,000km

		Normal	Severe
PASSENGER 2WD MODEL	Inspect differential oil (including viscous type LSD) (For leaks)	✓	
	Replace differential oil (including viscous type LSD)		C,H
4WD MODEL AND COMMERCIAL VEHICLE	Tighten body mountings (For D22 & Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed models only) and body mountings	✓	✓
	Lubricate axle joint in knuckle flange (For Y61 models)	✓	✓
	Replace transfer & differential oil	✓	✓
	Replace all mode 4WD transfer fluid & differential oil (Except LSD)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (4)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J
	Inspect front wheel bearing grease (4x2 models)	✓	✓
	Inspect steering damper (Commercial vehicles)	✓	✓

Memo

Date	/	/	Mileage	Dealer Name	Service Advisor
------	---	---	---------	-------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.





NOTE : Maintenance items

- (1) Replace the drive belts if found damaged or if the auto belt tensioner reading reaches the maximum limit (If auto belt tensioner is equipped)
- (2) For VQ turbocharged engine with Japanese domestic specifications
- (3) Use Eco filter or equivalent
- (4) The propeller shaft should be re-greased after being immersed in water
- (5) Use Genuine Nissan Hyper-CVT fluid (NS-1) or exact equivalent
- (6) Use Nissan Genuine Engine Coolant, or equivalent in its quality, in order to avoid possible aluminum corrosion within the engine cooling system caused by the use of non-genuine engine coolant
After first replacement, replace every 40,000 Km (24,000 miles) or 24 months
- (7) Fuel filters are located in LPG solenoid unit 1 and LPG solenoid unit 2 respectively

Severe driving conditions

The maintenance intervals shown on the preceding pages are for normal operating conditions

If the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table

- (A) Driving in dusty conditions
- (B) Repeatedly driving short distances
- (C) Towing a trailer or caravan
- (D) Extensive idling

- (E) Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high
- (F) Driving in high humidity or mountainous areas
- (G) Driving in areas which are high in salt or other corrosive materials
- (H) Driving on rough and/or muddy roads or in the desert
- (I) Driving with frequent use of brakes
- (J) Frequent driving in water

Maintenance for off-road driving

Whenever you drive off-road through sand, mud or water as deep as the wheel hub, more frequent maintenance may be required of the following items:(For commercial vehicles)

Whenever you drive off-road through sand, mud or water, more frequent maintenance may be required of the following items:(For passenger vehicles)

- ▲ Brake pads and rotors
- ▲ Brake lining and drums
- ▲ Brake lines and hoses
- ▲ Wheel bearing grease
- ▲ Free-running hub grease
- ▲ Transfer oil and differential oil
- ▲ All-mode 4WD transfer fluid and automatic transmission fluid
- ▲ Steering linkage
- ▲ Propeller shaft and front drive shaft
- ▲ Air cleaner filter
- ▲ Clutch housing (Check water entry)

